

Lab Report: Lissajous Figures and Capturing One-Time Events on an Oscilloscope

Akshara Sarma, Arjun Pavanje

January 24, 2025

Objective

1. To observe and analyze at least 6 Lissajous figures using an oscilloscope and justify their patterns with Python codes.
2. To demonstrate the method to capture a one-time event.

Equipment Used

- Oscilloscope
- Function generator
- Oscilloscope probes and cables

Procedure

Observation of Lissajous Figures

1. Connect the two input channels of the function generator to the two receiver channels of the oscilloscope.
2. For each channel, connect the positive end of the cable from the function generator to the positive end of the probe and the other (ground) end to the ground of the probe

3. Set the function generator to produce sinusoidal (or ramp) waveforms on both channels of varying phase, amplitude, frequency.
4. Use the phase alignment feature of the function generator to ensure that both waveforms start at the same time.
5. Record and analyze the patterns observed on the oscilloscope.
6. Repeat the process for at least six different sets of waveforms in which the amplitude, starting-phase, frequency, wave-type (ramp or sinusoidal) parameters are varied

Capturing One-Time Events

1. In the function generator, select a square wave (alternatively, a ramp or sine function may also be used) as the waveform.
2. Press the *MOD* button and choose the *BURST* option. Set the trigger to manual.
3. This configuration enables the generation of a square wave with a pre-defined number of cycles when the trigger button is pressed on the function generator.
4. Connect the output of the function generator to the input of the oscilloscope.
5. On the oscilloscope, press the Single button. This ensures that the next event captured by the oscilloscope is displayed and then the display pauses automatically.
6. Trigger the burst mode manually on the function generator to generate the single pulse or event.
7. Observe and record the captured waveform on the oscilloscope.

Results and Discussion

Lissajous Figures

Example Waveforms and Figures:

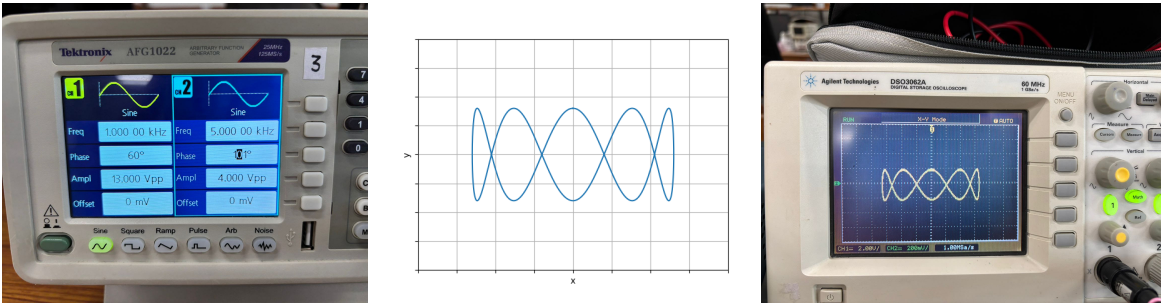


Figure 1: Lissajous Figure 1

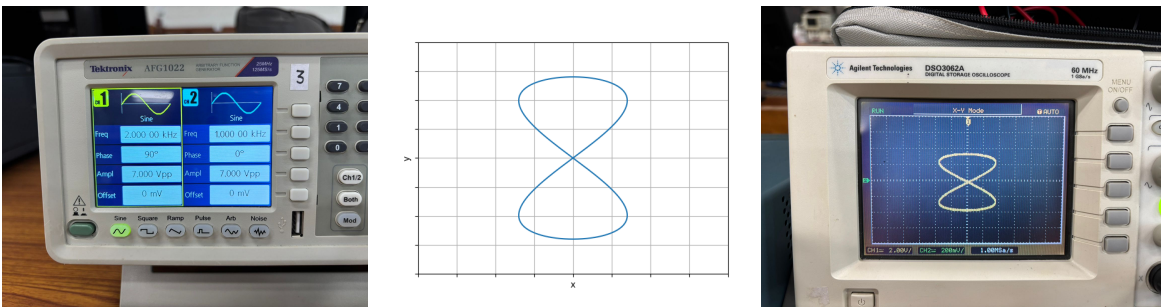


Figure 2: Lissajous Figure 2

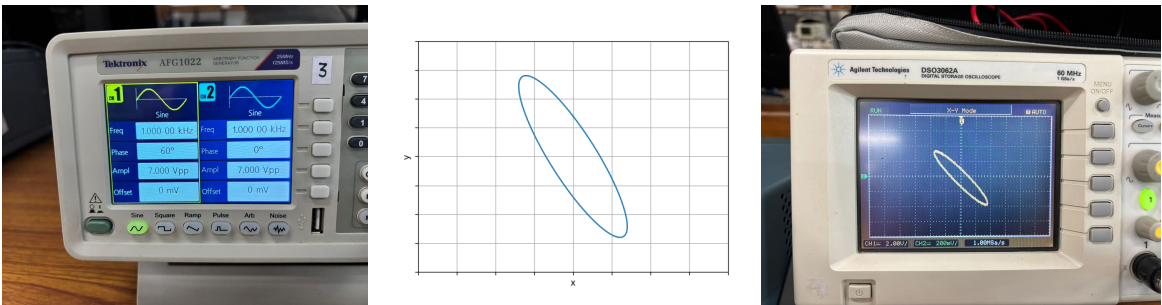


Figure 3: Lissajous Figure 3

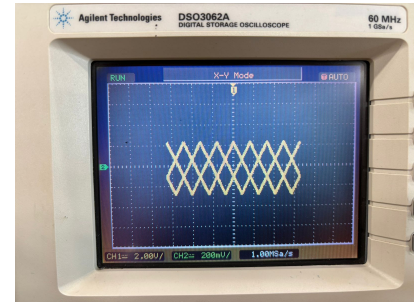
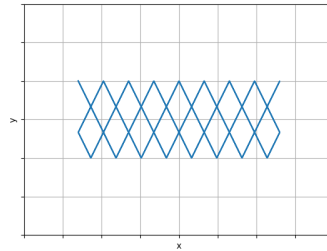


Figure 4: Lissajous Figure 4

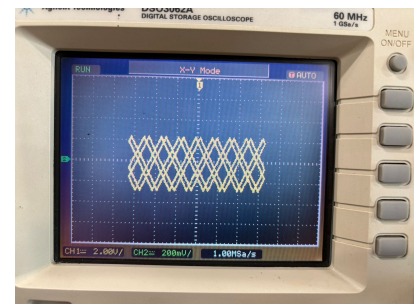
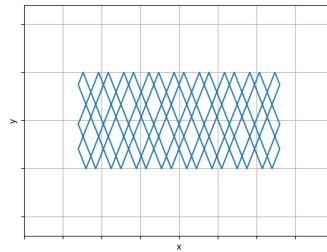
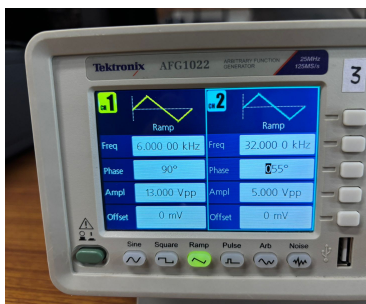


Figure 5: Lissajous Figure 5

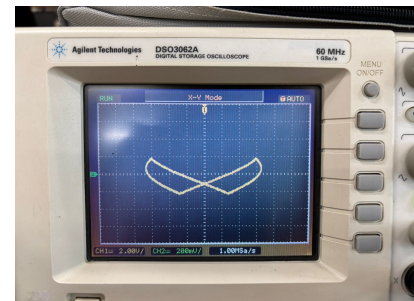
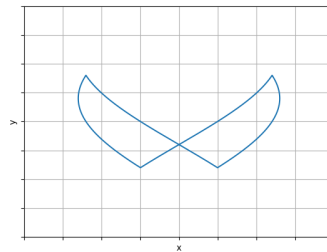
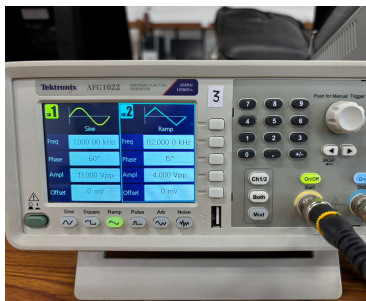


Figure 6: Lissajous Figure 6

One-Time Event Capture

The **Single** mode on the oscilloscope ensures that the display is frozen after capturing the first trigger event. This is useful for observing transient signals or rare events. By using burst mode on the function generator, a precise number of cycles or a single waveform is generated and can be accurately captured.

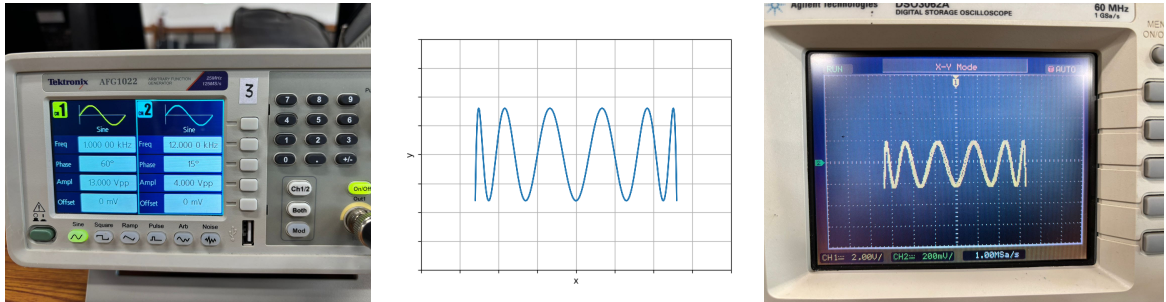


Figure 7: Lissajous Figure 7

Conclusion

The experiment successfully demonstrated the generation and analysis of Lissajous figures, highlighting their dependence on frequency ratio and phase difference. The procedure to capture one-time events on an oscilloscope was also explored and verified using burst mode with manual triggering.